


ASSEMBLY INSTRUCTIONS

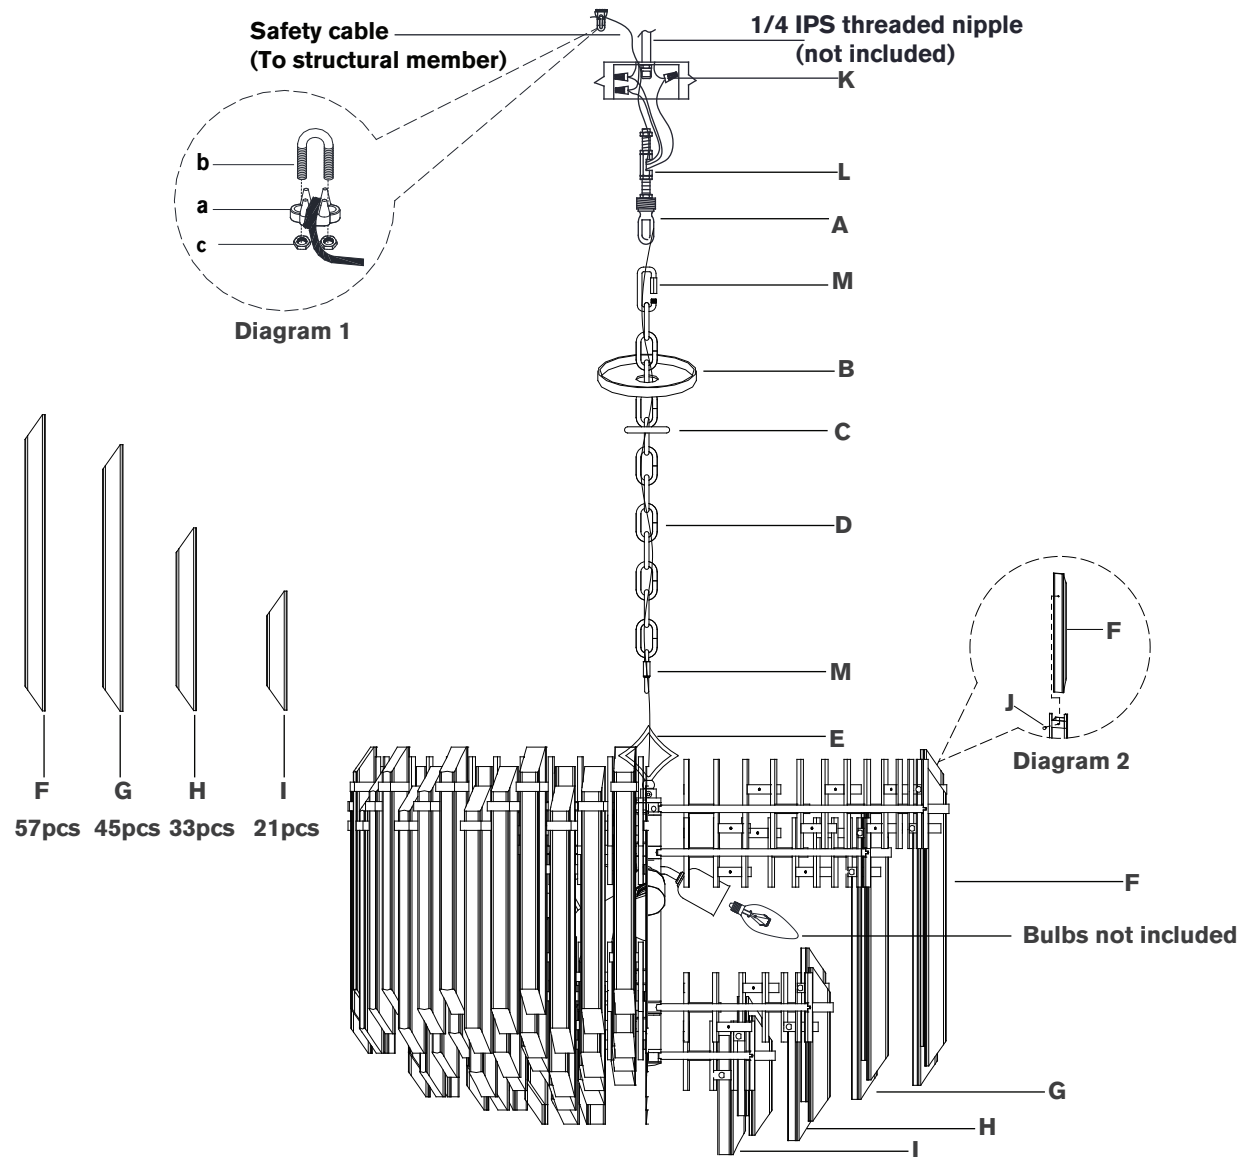

Adele Large Wide Drum Chandelier

Item # SK 5421

NOTICE:

This light fixture should be installed in accordance with all applicable, local installation codes, and by a person familiar with the construction and operation of it, as well as the hazards involved. Inspect item and contents carefully. If any damage or defect is found, do not install. Retain all packaging material until installation is complete and approved.

11. Run safety cable through junction box and around structural member of building. Wrap the safety cable around the saddle (**a**), and secure with u-bolt (**b**) and hex nuts (**c**). (See diagram 1)
12. Connect fixture ground wire (bare copper) to the supply ground wire (usually green or bare copper) using wire nut (**K**).
NOTE: It is imperative that the fixture is grounded.
13. Connect fixture neutral wire (ribbed) to the supply neutral wire (usually white) using wire nut (**K**).
14. Connect fixture hot wire (smooth with markings) to the supply hot wire (usually black) using wire nut (**K**).
CAUTION: Do not reverse the hot and neutral connections.
15. Make sure all wire connections are tight, then carefully tuck into the junction box.
16. Install canopy (**B**) to collar loop (**A**) by securing with collar ring (**C**).
17. Insert light bulbs into the sockets.
18. To install acrylic parts (**I, G, H, F**) completely back out the thumbscrews (**J**) on fixture frame, but do not remove.
19. Carefully slide acrylic part all the way down channel on frame and secure with thumbscrew (**J**) once lined up with small divot on back. (See diagram 2)
NOTE: Start from bottom layer, installing all parts before moving up to next layer.

Care Instructions: Clean only with a soft dry cloth or feather duster. Do not use abrasive or chemical agents.